

DÉCOR ONLY INSTALL GUIDE v7.0

Thank you for biting into our patent pending...

HF Hang Fangs dot com

3-D Photo Album 4-Corner Décor-Only
or No Warp Wall Anchors
4 Frameless wAll aRt

Make your wall space a better place.

Hang with the best.



Made in the U.S.A.

Improve your LOVE of LIFE:

- You'll love our *Photo Album Corner Décor and No Warp Wall Anchors*,
- **SOLD AS Décor Only Mount** on **pre-hung Frameless Wall Art**, BUT...
- **Wall Mountable corners** can anchor (not included) for no warp or fall.
- **Heavy Duty: Fang 40 lbs.** with top slide-out or slide-up for easy removal.
- We bring **beauty, brains, and brawn** to your wall art and anchor method.
- Also adheres to *other pre-hung wall art* as framed, unframed, metal, etc.
- Enjoy our **DESIGNER FINISHED CORNERS** as a classy lifestyle brand.
- QUICK UPGRADES for **artsy-fartsy, seasons, styles, or mood changes**.
- *Be your own artist* creating unique art-on-art in your *Photo Album Finish!*
- With all **your favorite colors and textures** on any wall at home or work.

Art frames cost \$150 and up. Hang Fangs wows your cheap and expensive wall art as fabulous, precious, and new in your own art show for the cost of a haircut. Our décor only mount helps to hide warps.

DÉCOR ONLY INSTALL

Why fix warps with wall mounts when you can hide them?

We have a wall mount pillar coming with 1 design while all others are décor only mounts with a wide variety of custom designs as explained.

DISCLAIMER: Adhesives have the risk of taking off paint or art surfaces or other damage when removed incorrectly so we follow 3M's advice and recommendations in our guides at hangfangs.com to convey manufacturer use, recommendations, and resources with best use as we make no representations or warranties as to the accuracy, completeness, or reliability of adhesive specifications. We sell our products 'As Is' without any guarantees or warranties, express or implied with a 30-day money back guarantee. The user assumes all risks associated with the use of this product, as hangfangs.com disclaims all liability for any damage including direct, indirect, incidental, or consequential. We convey 3M knowledge, use, and removal techniques for 300LSE transfer tape 9472LE in conjunction with Hang Fangs PLA corner frames as a Low Surface Energy (LSE) to other LSE surfaces such as painted canvas, unpainted canvas, fabric, and other art materials for proper use of 3M tape with our products.

PREVENT DAMAGE: Although we haven't found the tape to remove paint from canvas or fabric when twisting off an adhered corner frame, 3M recommends you always test adhesives, solvents, and removal steps on inconspicuous areas first. We give you a 12" x 1" strip to cut into 1" x 1" squares of double-sided 3M adhesive with 8 for 2 full installs, 2 for testing, and 2 for 1 mistake on each install. **PRO TIP:** cut 2 test tape pieces in half to double test pieces for back of wall art canvas or material and never stick on paper as it won't come off. Clean test area on back of wall art and remove loose paint and remove the oversized backing on one side of the tape. While pinching tape between fingers with a small sticky section exposed, stick it on the canvas and test paint removal slowly pulling away at a sharp angle like 180 degrees. We haven't experienced paint removal from canvas, but 3M says it must be fully cured for 72 hours to remain intact and instead of yanking the taped corner frames...be gentle twisting them off. Do not use tape on drywall as it may remove paint.

Please refer to 3M adhesive removal guidelines at the bottom of this document for use with Hang Fangs corner frames (aka pillars when standing alone like at the end of a driveway). Damage to wall art corners for any reason (moving, removal, etc.) could relegate you to using Hang Fangs permanently to cover it while damage should never occur outside the tape area if at all per your test above and our experience. **PRO TIP:** wall art blemishes can be fixed with markers or paint to renew wall art in addition to adding new and nice-looking Hang Fangs corner frames. We've never found heat necessary for any corner frame removal using a twisting motion to remove, but you can use a blow dryer to make removal of any residual tape on wall art easier. **PRO TIP:** By design it's harder to remove tape from the flat corner frame surface which luckily can be put in the microwave for 15 seconds or heated with a blow dryer to soften tape. WARNING: do NOT touch tape heated for more than 15 seconds as it could burn you. Tape must be rolled up and off the flat surface using fingers and tweezers to pull the remains loose. Let surfaces fully cool before taping again. You can use rubbing alcohol on residual per 3M, but test on back of wall art first before use.


COMING SOON: We designed a wall mounted version that fixes warps but due to manufacturing limitations, this 4-sided piece is molded vs. 3D printed so it won't have many custom textures like décor only pillars (1 static molded style vs. 24 flexible printed styles so far). It has flat sides like photo album corners as you see online, and all 4 parallel sides pull warps to the wall further hiding warps inside as corners appear perfectly parallel and can be taped to wall art for décor only installs to help hide minor warps <1/4" inside its parallel box style. Typically, warps >3/8" can be **anchored on 2 caddy corners alone to resolve warps** with the opposite 2 caddy corners taped on.

HOW TO MEASURE DÉCOR ONLY: There are 3 sizes of décor only Hang Fangs corner frames which can have up to 1/16" variance/tolerance depending on the design and how the bottom edge scanned in for 3D printing as it's not an exact science while >80% of the designs are within 1/32" of target height. **If the thickness of wall art is shorter than the inside height of the pillar**, then the décor only mountable pillars will meet the wall first and hold the pre-hung wall art parallel from the wall looking excellent like no other wall art hanger before (if not warped...see wall art photos online). **If the thickness of wall art is more than the inside height of the pillar**, then the wall art will reach the wall first (if not warped) and pillar gap from wall should be less than 3/16" to hide gaps

based on our sizing recommendations which is hardly noticeable especially when viewing from the front creating an excellent photo album look. Modest warps $<1/4$ " from the wall are much harder to see with taped on pillars while extreme warps $>3/8$ " from the wall are not as noticeable as pillar designs distract.

PILLAR SIZES BASED ON WALL ART THICKNESS IN $1/4$ " INCREMENTS:

1. $7/8$ "– $1\ 1/8$ " Thick Wall Art = Hang Fangs Pillar Size Range: $1\ 1/32$ "– $1\ 3/32$ "
2. $1\ 1/8$ "– $1\ 3/8$ " Thick Wall Art = Hang Fangs Pillar Size Range: $1\ 8/32$ "– $1\ 10/32$ "
3. $1\ 3/8$ "– $1\ 5/8$ " Thick Wall Art = Hang Fangs Pillar Size Range: $1\ 14/32$ "– $1\ 16/32$ "

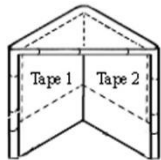

TAPE: Place 1" x 1" tape at locations Tape1 or Tape2 in drawing to left to adhere to top and bottom edge of frameless wall art for least conspicuous installation on art front. **PRO TIP:** If tape becomes less sticky and needs new tape, **you can tape over existing smooth layers** to refresh, but if tape is rolled up or not flat then old tape should be removed. Tape will stick to the pillar flat surface more than the wall art almost 100% of the time. 3M calls it "molecular adhesion" and there's a lot more on perfectly flat PLA plastics than canvas.

WHAT YOU NEED: 4) Hang Fangs corner frames, double-sided tape (included), scissors, ruler, tweezers, hobby or utility knife, lightly dampened rag, pre-hung frameless wall art with 4 corners (or similar wall art that accepts Hang Fangs corner frames i.e., metal art, etc.), and possibly a ladder.

1. **HOW TO INSTALL:** Ensure the Hang Fangs corner frames fit as desired. Push the front against the wall art on each corner and note **which sides contact the top and bottom of art edges for tape locations**. When fully inserted, the wall art should either be less than $1/4$ " from the wall or less than $1/4$ " short of touching the wall. Else, you have the wrong size for your wall art thickness. It's tight.
2. **Use damp cloth to wipe top and bottom tape locations on wall art and let dry.** Remove loose paint.
3. **Mount Hang Fangs Corner frames:** Cut 4) 1" x 1" squares along ruler from included tape strip. The 3M tape has 2 sides with protective backing with one side flush with the tape and the other side oversized beyond tape edges. Peel oversized backing off first and adhere squarely to Hang Fangs corner frame per drawing above in tape locations. Iron it on with your finger to the entire surface for good contact. Remove the second backing from the tape. **PRO TIP:** Use a hobby or utility knife to lift a paper backing corner from the adhesive to remove with tweezers. Repeat for all 4 corner frames/pillars.
4. **Keep each taped corner frame surface slightly away from wall art as you move it squarely into place.** Press the taped surface of the corner frame on to the tape location identified in Step 1 above. It can be moved slightly to square up before pressing on firmly for 5 seconds of steady pressure against the wall art. **PRO TIP:** If a taped corner frame/pillar comes off, it can be reapplied to wall art if not sticking to debris like paper or loose paint but is most adhesive at first so removing repeatedly weakens adhesion. **ENJOY YOUR ART ON ART CREATED BY YOU!**
5. **HOW TO REMOVE ADHERED HANG FANGS CORNER FRAMES:**
In the rare case you find your wall art needs heat to remove a Hang Fangs corner frame to save your art surface, then you should use a hair blower to heat the corner pieces all around the taped side to loosen them. Then, whether or not you need heat, gently twist each corner frame away from the non-taped side towards the taped side until it releases which should take the tape with the corner frame (aka pillar). If tape residue remains stuck to wall art, then use tweezers to carefully and slowly peel tape from one end to the other at 180 degrees to the art surface using a blow dryer if needed. If you'd like to remove tape from the corner frame, you roll it up on the surface using your finger until only a little bit remains unrolled. Then, use tweezers to help remove the final remains. **You can heat them in the microwave for 15 seconds at most to prevent being hot enough to burn you which makes adhesive removal easier** even with tweezers and finger rolling. You can use rubbing alcohol to clean any residual but always test on back of wall art before cleaning it with solvents. Let all surfaces cool completely before reapplying tape. Hang Fangs corner frames are recyclable but re-gifting or reusing is a better choice for the environment.

REPLACEMENT TAPE SPECS: Double-sided 3M 300LSE 1" wide transfer tape.

We're fly on the wall.